

SW-LCD INSTRUCTIONS

Parts of your SW-LCD



Pedal Assist

The pedal assist function on your SW-LCD screen is controlled by the up & down keys on your controller.

The level of Power assistance you have is displayed on the bottom left hand corner of the screen

Night Mode

To active 'Night Mode' hold the 'UP' and 'MODE' Keys on the controller. As seen here ----->



Walk Mode

'Walk mode' will assist you up to 6MPH this replaces the throttle on bikes without one.

Battery Meter

Odometer



Power Assistance Level

Current Speed or max speed

Current Watts